

LT-Face-X

Non-screen Facial Recognition Access
Control Terminal



 

In order to guarantee a better experience when using, please read the manual carefully before operating the device.

Contents

Device Appearance	2
Package List	3
Mounting Diagram & Step.....	4
Wiring Instructions	5
Device Indicator	6
App Activation	7
For cloud platform	
Device Web Activation	9
For offline or cloud platform	


Device Appearance

Dimension Unit: mm

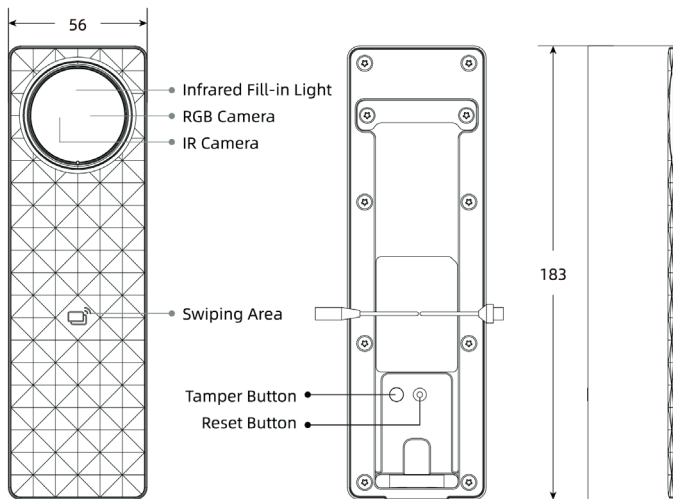

Package List


- 1 Host
- 2 Mounting Sticker
- 3 Wall Mounting Bracket
- 4 Manual
- 5 Self-tapping Screw
- 6 Wall Mounting
- 7 Wrench
- 8 Set Screw

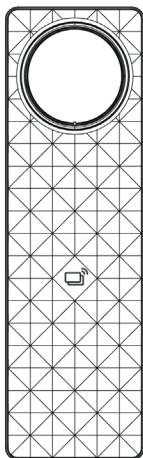

1



 2




3



4



 5



6



 
7




8

Mounting Diagram & Step


- 1 During the wall mounting, drill the holes in the hole positions as shown in the Mounting Sticker and insert the Wall Mountings into the holes, in which the upper and lower ones must be drilled, and the middle ones following the customer needs.



- 2 Fix the Wall Mounting Bracket to the wall with Self-tapping Screws.

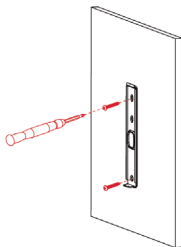

- 3 Connect the Cable and I/O Interfaces to the device.

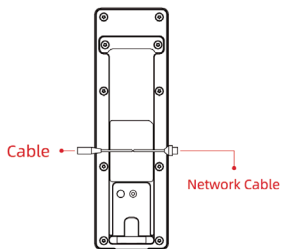

- 4 Fasten the device recessed hole to the Wall Mounting Bracket and use a Wrench to tighten the bottom Set Screw.



 
 
 
 
- 5 Mounting completed.





Wiring Instructions






RED = 12V
BLACK = GND



  
VIOLET = 232_TX
GREEN = 232_RX
BLACK = GND
WHITE = WG_OUT_D0
YELLOW = WG_OUT_D1
BLACK = GND



   WHITE = BUTTON
YELLOW = SENSOR
BLACK = GND
VIOLET = RS485+
GREEN = RS485-



 
YELLOW = WG_IN_D0
GRAY = WG_IN_D1
BLACK = GND



WHITE = DOOR_NO
ORANGE = DOOR_COM
RED = DOOR_NC



 Normally Open or Normally Closed can be connected according to the actual situation.



BLACK = ALARM
WHITE = GND



Device Indicator

Indicator Status	Operating	Operating Result
White indicator is always on.	Device Powered on/ Restarted/Started after successful upgrade.	Device starting up.
	Personnel entered the recognition range.	Recognizing face.
White indicator flashes slowly.	Device not activated at first boot.	Device not activated.
Green indicator is on for 1s.	Send Activation / Bluetooth Network Configuration command.	Activation/Network Configuration succeeded.
	Face/Card/ Face&Card Verification	Verification succeeded, and a voice prompt is given: Thank you.
		Face&Card verified successfully, and a voice prompt is given: Card verified, face recognition, please.
Red indicator is on for 1s.	Send Activation / Bluetooth Network Configuration command.	Activation/ Network Configuration failed.
	Mask Verification	Mask status abnormal, and a voice prompt is given: Please wear a mask/Please take off the mask.
	Face/Card/ Face&Card Verification	Face recognition failed, and a voice prompt is given: Please come closer.
		Recognition failed, and a voice prompt is given: Recognition failed.
		Personnel is not within the validity period, and a voice prompt is given: Time zone deny.
		Personnel mode not enabled.
White Breath LED	No personnel within the recognition range.	Standby Status



www.lamatel.ca

LAMATEL and the Lamatel brand are registered trademarks, and all content is the property of their respective owners.
© 2022 Lamatel. All rights reserved